

Configuring the DS9208 or LS2208 Scanner for NorthStar Order Entry

The Motorola/Zebra DS9208 and LS2208 scanners must be programmed to send a CR and LF bytes at the end.

These two barcodes will reset the scanner to factory settings, then configure it to send CR and LF bytes after each scan.

This takes effect after Order Entry build #533.

Scan this first



Set Factory Defaults

Scan this second



<DATA> <SUFFIX 1>

(1)